


ASSEMBLY AND INSTALLATION INSTRUCTIONS

TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF
WARNING: POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirement.

1. Determine the desired length from the intended ceiling or mounting surface that you wish the fixture GLASS SHADE (M) to extend down. Using the combination of tubes (H/8", J/12" and/or K/16") and chain links to give your desired length. Screw them together with using the NIPPLE (I) provided on each end of the assembled TUBES (H, J, K), and hang the chain to the two fixture loop.
2. Determine the length of the chain you need, using pliers to disconnect the extra chain and discard it away. Feed the fixture wires through the TUBES (H, J, K), chain and the CANOPY (D). Screw the components together until they are secured and do not come loose.
3. Pull the power supply wire out from the outlet box, and mount the MOUNTING PLATE (A) to the outlet box by using the OUTLET BOX SCREWS (C).
4. Attach the power supply wire to the fixture wire by connecting black supply wire to black (or smooth) fixture wire, and white supply wire to white (or ribbed) fixture wire, fixture ground wire to the power supply ground wire using wire nuts respectively.
5. Adjust the fixture MOUNTING SCREWS (B) until they protrude out from the CANOPY (D), and secure into place by using the DECORATIVE NUTS (E) provided.
6. Unscrew and remove the threaded SOCKET RING (N) from the exterior threaded SOCKET (L). Slide the entire hole of the GLASS SHADE (M) over the exterior threaded SOCKET (L) and screw the SOCKET RING (N) back onto the exterior threaded SOCKET (L).
7. Place a light bulb into the exterior threaded SOCKET (L) with the type and wattage rating specified on the lamp replacement marking located on the fixture.

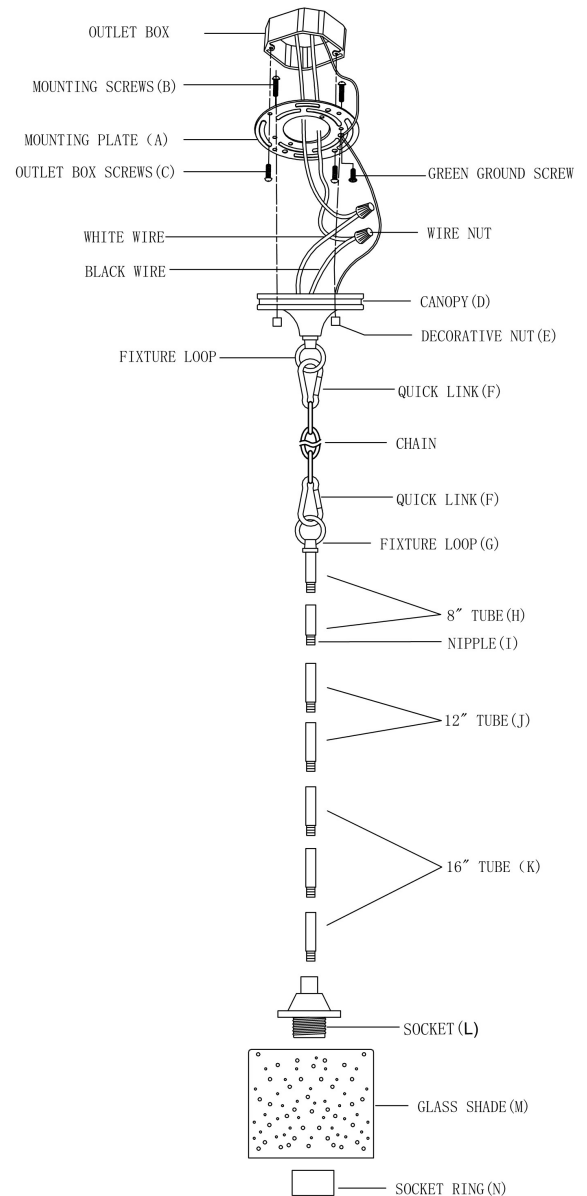

#3202-65
#3202-69