ASSEMBLY AND INSTALLATION INSTRUCTIONS

TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF WARNING: POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirement.

- 1. Determine the desired length from the intended ceiling or mounting surface that you wish the fixture glass shades (O) to extend up . Using the combination of three tube (G, I, J) lengths to give your desired length and screw them together using the nipples (H) provided on each end of the assembled tubes (G, I, J).
- 2. Feed the fixture wires from the coupler (K) through the tubes (G, I, J) and the canopy (D). Screw the components together until they are secured and do not come loose.
- 3. Pull the power supply wire out from the outlet box, and mount the mounting plate (A) to the outlet box using the outer box screws (C).
- 4. Attach the power supply wire to the fixture wire by connecting black supply wire to black (or smooth) fixture wire, and white supply wire to white (or ribbed) fixture wire, fixture ground wire to the power supply ground wire using wire nuts respectively.
- 5. Place the canopy (D) on the fixture by locking the swivel (F) tight. Adjust the fixture mounting screws (B) until they protrude out from the canopy (D), and secure into place using the decorative nuts (E) provided.
- 6. Secure the glass shade (O) to the socket (P) by tightening the socket ring (N).

