




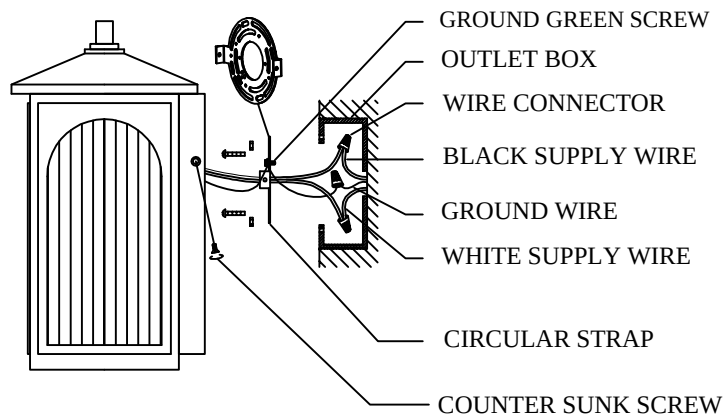


703-6-69
703-8-69
703-9-69
703-11-69

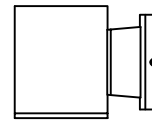


920-16
920-69
920-86

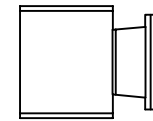

 
920-2-16
920-2-69
920-2-86




977-16
977-69
977-86

 


977-2-16
977-2-69
977-2-86

 


3-708-69/16

 

9718-5-69
9718-6-69
9718-8-69

 


3-722-15
3-723-15
3-724-15

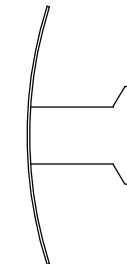

9720-69/16
9721-69/16
9722-69/16

Relamping instructions

- 1) Remove top cover or fixture cage by unscrewing finial or screws
- 2) Replace bulbs
- 3) Replace top cover or fixture cage and tighten screws

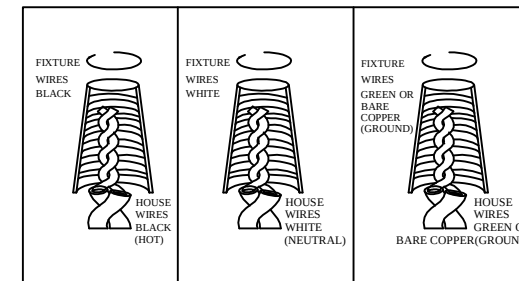

ETL LISTED
Intertek
american lighting association
WALL MOUNT