
 



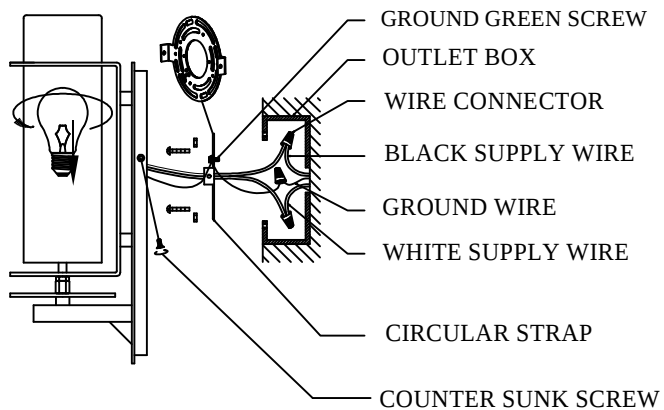


7203-5-86/3/69
7203-6-86/3/69
7203-7-86/3/69




720-2-3/8/69/86/16
721-2-3/8/69/86/16

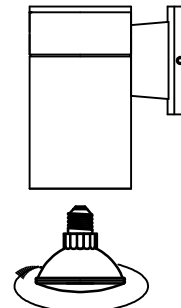


720-3/8/69/86/16
721-3/8/69/86/16

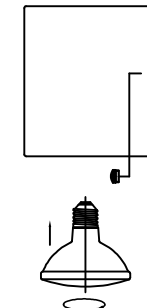


777-3/69/86
778-3/69/86

 


702-16-69
702-24-69

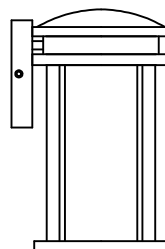

7110-3/69/86
7110-3-3/69/86
7110-4-3/69/86

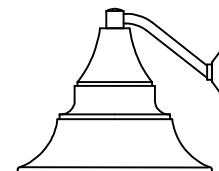


767-8/11-86
767-8/11-59

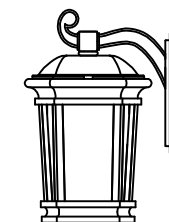

714-6-59
714-7-59
714-8-59


Relamping instructions

- 1) Remove top cover or fixture cage by unscrewing finial or screws
- 2) Replace bulbs
- 3) Replace top cover or fixture cage and tighten screws

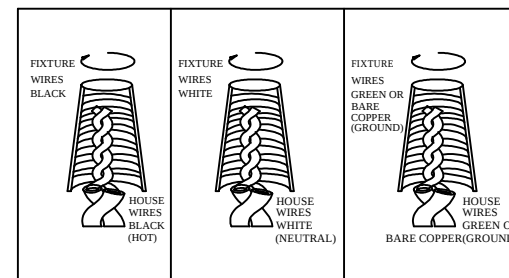


american
lighting
association


WALL MOUNT

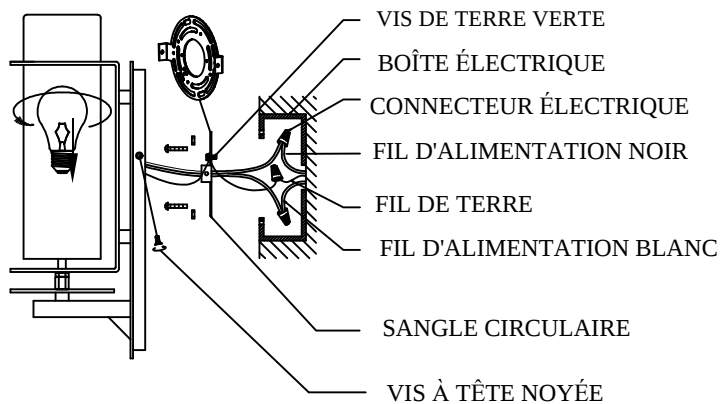

 
7203-5-86/3/69
7203-6-86/3/69
7203-7-86/3/69




720-2-3/8/69/86/16
721-2-3/8/69/86/16

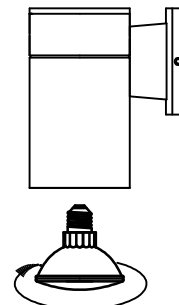


720-3/8/69/86/16
721-3/8/69/86/16

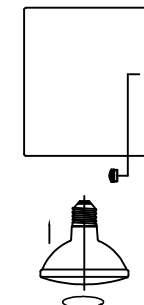


777-3/69/86
778-3/69/86

 


702-16-69
702-24-69

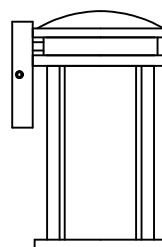

7110-3/69/86
7110-3-3/69/86
7110-4-3/69/86

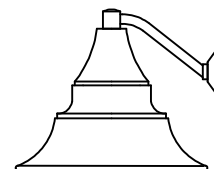


767-8/11-86
767-8/11-59

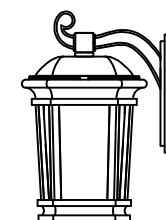

714-6-59
714-7-59
714-8-59

INSTRUCTIONS DE REMPLACEMENT DES LAMPES

- 1) RETIREZ LE COUVERCLE SUPÉRIEUR OU LA CAGE DE L'APPAREIL D'ÉCLAIRAGE EN DÉVISSANT LE FAÎTEAU OU LES VIS
- 2) REMPLACEZ LES AMPOULES
- 3) RÉINSTALLEZ LE COUVERCLE SUPÉRIEUR OU LA CAGE ET SERREZ LES VIS

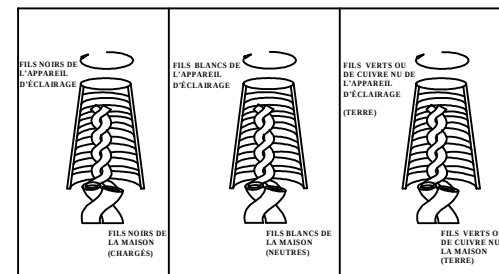

american
lighting
association

MONTAGE MURAL