
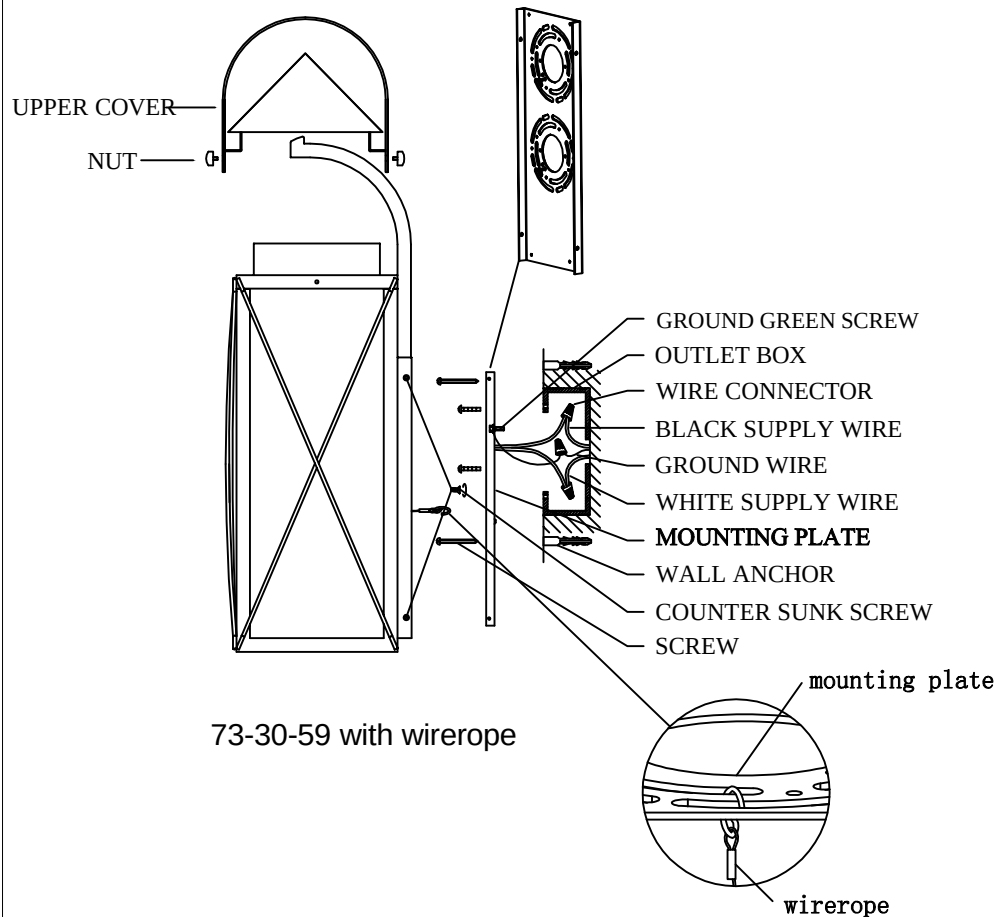


73-25-59 without wirerope
The upper cover of this item can not be remove


**ATTACH WIREROPE TO MOUNTING PLATE
TO PREVENT THE FIXTURE DROP DURING INSTALATION**

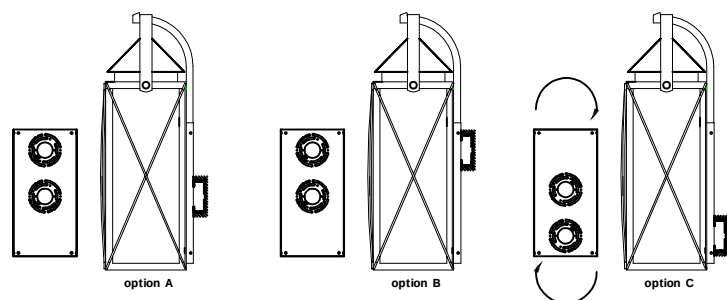

**Customer choose the option A
or option B or option C for their
requirements**


Relamping instructions

- 1) Remove top cover or fixture cage by unscrewing finial or screws
- 2) Replace bulbs
- 3) Replace top cover or fixture cage and tighten screws


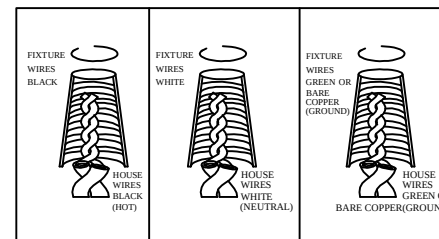


american
lighting
association

WALL MOUNT

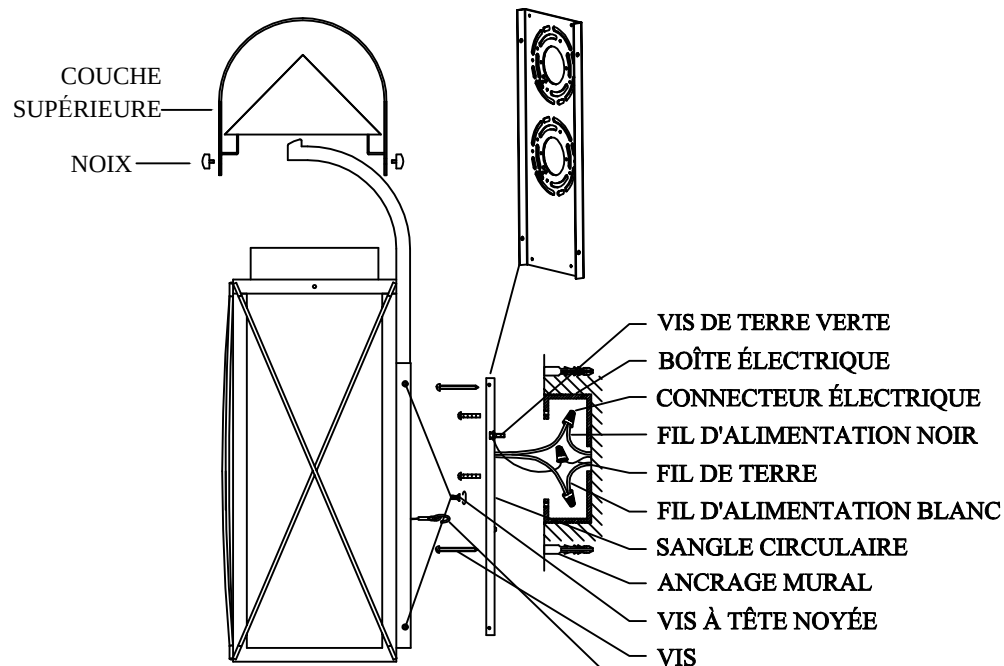

73-30-59 avec câble

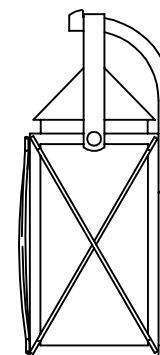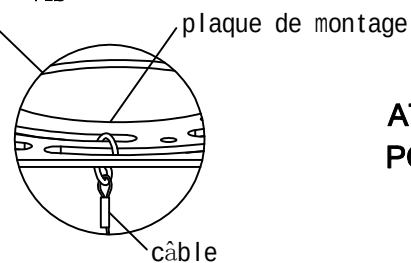


73-25-59 sans câble
Le couvercle supérieur de cet article ne peut pas être retiré


**ATTACHEZ LE CÂBLE À LA PLAQUE DE MONTAGE
POUR ÉVITER LA CHUTE DE L'APPAREIL PENDANT L'INSTALLATION**

INSTRUCTIONS DE REMPLACEMENT DES LAMPES


- 1) RETIREZ LE COUVERCLE SUPÉRIEUR OU LA CAGE DE L'APPAREIL D'ÉCLAIRAGE EN DÉVISSANT LE FAÎTEAU OU LES VIS
- 2) REMPLACEZ LES AMPOULES
- 3) RÉINSTALLEZ LE COUVERCLE SUPÉRIEUR OU LA CAGE ET SERREZ LES VIS

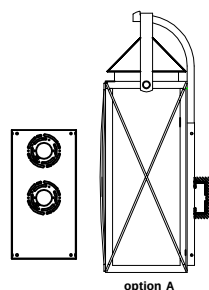

option A

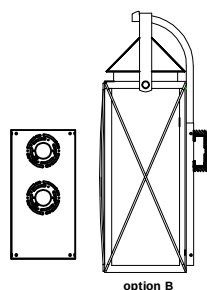


option B

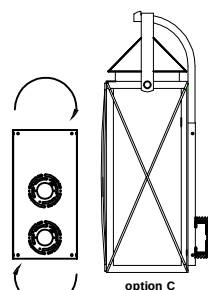

option C

**Customer choose the option A
or option B or option C for their
requirements**

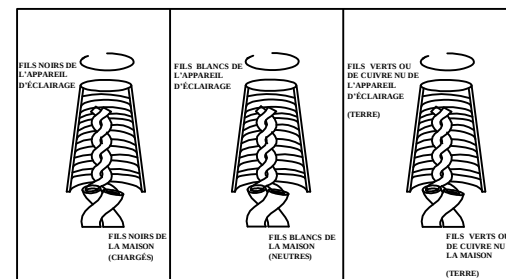

american
lighting
association

MONTAGE MURAL