 
 
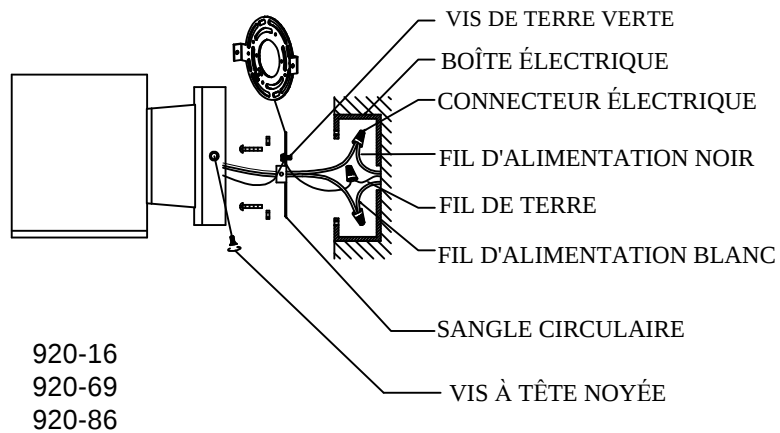 


9720-69/16
9721-69/16
9722-69/16

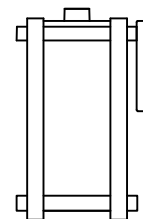

709-11-69
709-14-69



 
920-2-16
920-2-69
920-2-86




977-16
977-69
977-86




977-2-16
977-2-69
977-2-86



9718-5-69
9718-6-69
9718-8-69


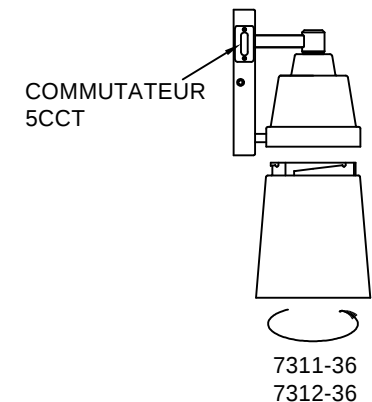 


 INSTRUCTIONS DE REMPLACEMENT DES LAMPES
1) RETIREZ LE COUVERCLE SUPÉRIEUR OU LA CAGE DE L'APPAREIL D'ÉCLAIRAGE EN DÉVISSANT LE FAÎTEAU OU LES VIS
2) REMPLACEZ LES AMPOULES
3) RÉINSTALLEZ LE COUVERCLE SUPÉRIEUR OU LA CAGE ET SERREZ LES VIS

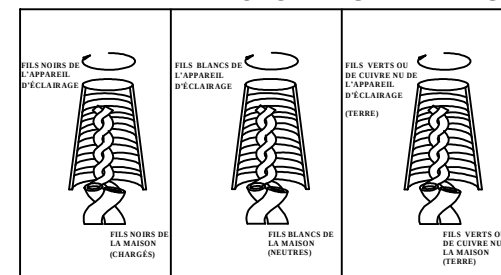


american
lighting
association

  
MONTAGE MURAL

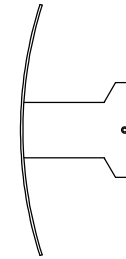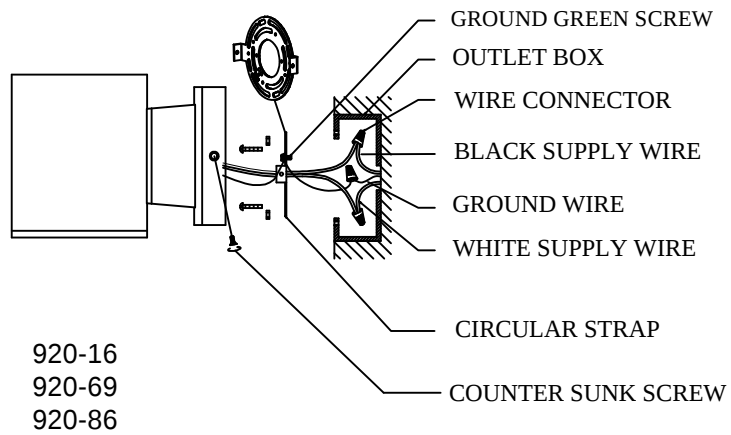

9720-69/16
9721-69/16
9722-69/16

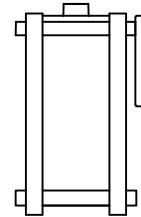 


709-11-69
709-14-69

 


920-2-16
920-2-69
920-2-86



 
977-16
977-69
977-86



977-2-16
977-2-69
977-2-86

 


9718-5-69
9718-6-69
9718-8-69

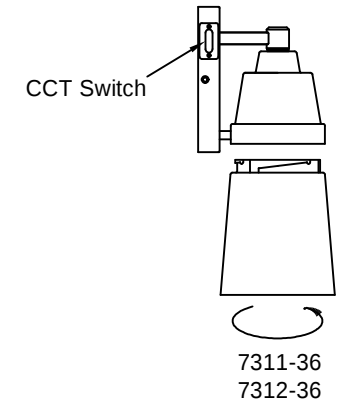 

Relamping instructions

 - 1) Remove top cover or fixture cage by unscrewing finial or screws
- 2) Replace bulbs
- 3) Replace top cover or fixture cage and tighten screws

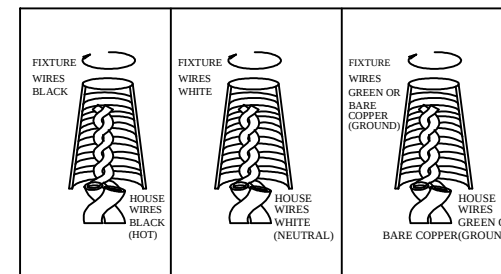

american
lighting
association

WALL MOUNT