

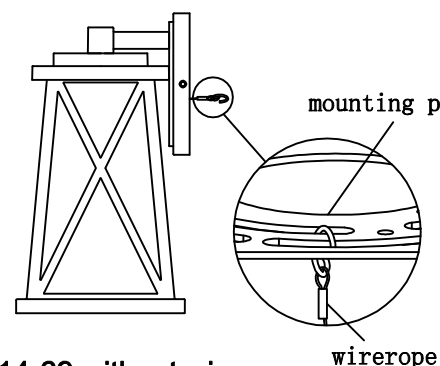


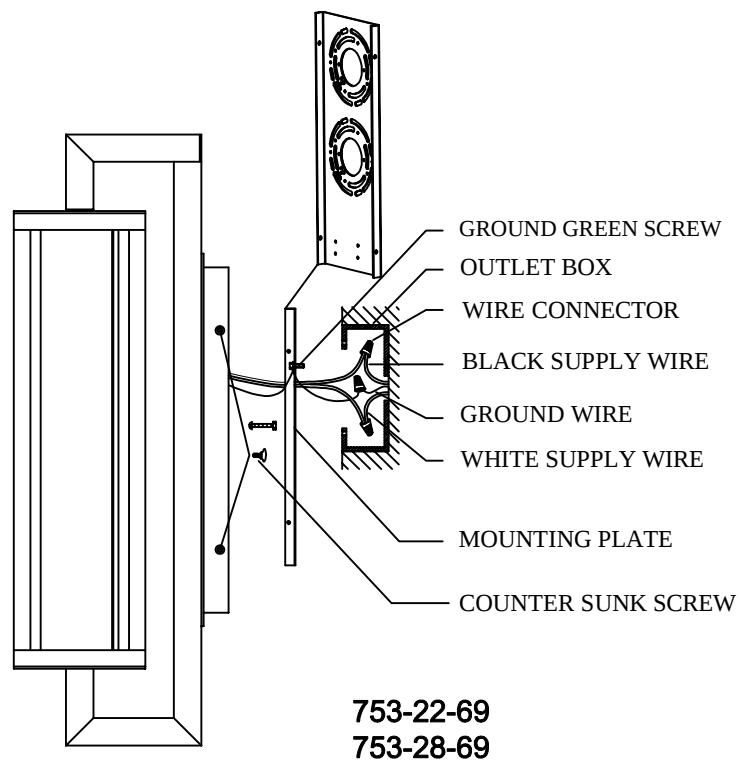


725-14-69 without wirerope
725-16-69 without wirerope
725-22-69 with wirerope

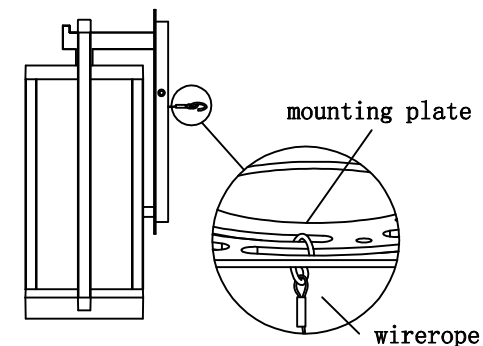

736-15-69/6 without wirerope
736-18-69/6 without wirerope
736-22-69/6 with wirerope
736-30-69/6 with wirerope


**ATTACH WIREROPE TO MOUNTING PLATE
TO PREVENT THE FIXTURE DROP DURING INSTALATION**

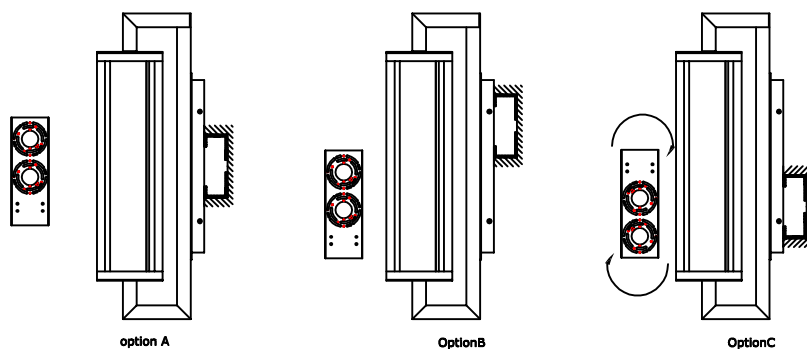

**Customer choose the option A
or option B or option C for their
requirements**



Relamping instructions

- 1) Remove top cover or fixture cage by unscrewing finial or screws
- 2) Replace bulbs
- 3) Replace top cover or fixture cage and tighten screws

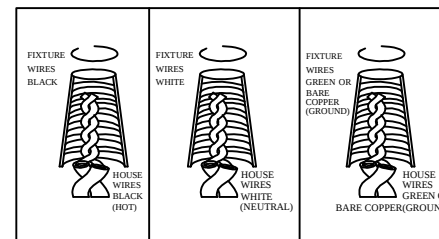


american
lighting
association

WALL MOUNT

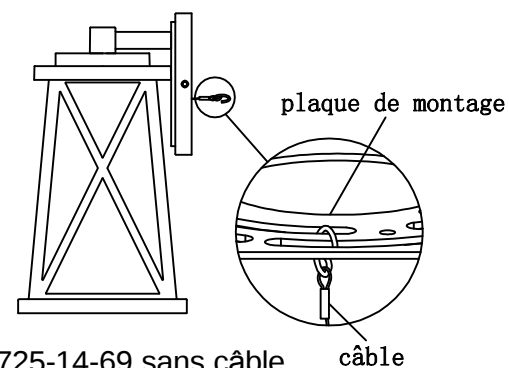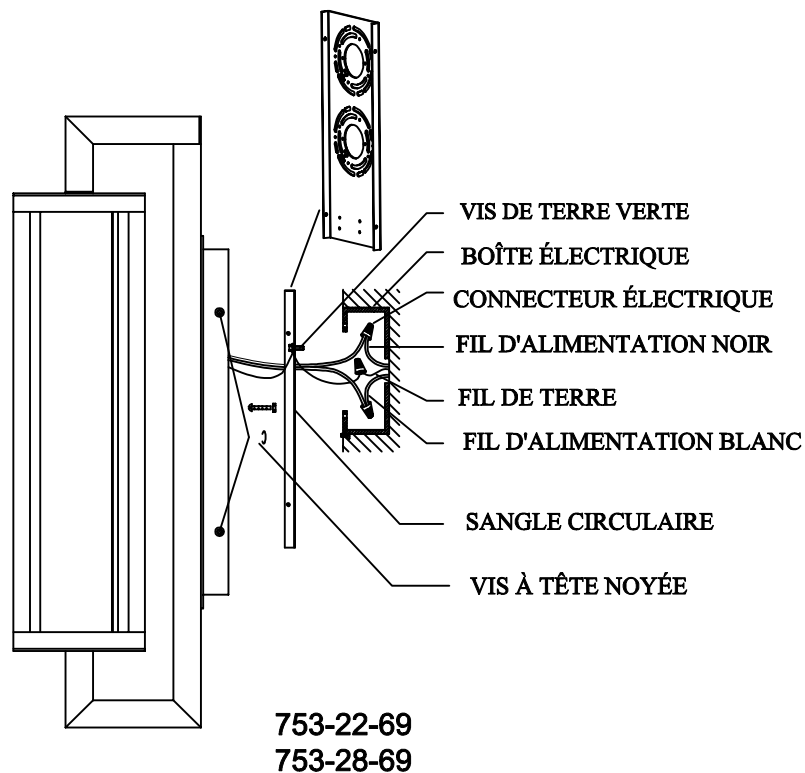


725-14-69 sans câble
 725-16-69 sans câble
 725-22-69 avec câble

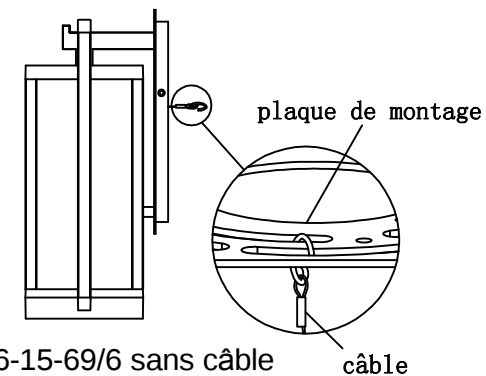

736-15-69/6 sans câble
 736-18-69/6 sans câble
 736-22-69/6 avec câble
 736-30-69/6 avec câble


**ATTACHEZ LE CÂBLE À LA PLAQUE DE MONTAGE
 POUR ÉVITER LA CHUTE DE L'APPAREIL PENDANT L'INSTALLATION**

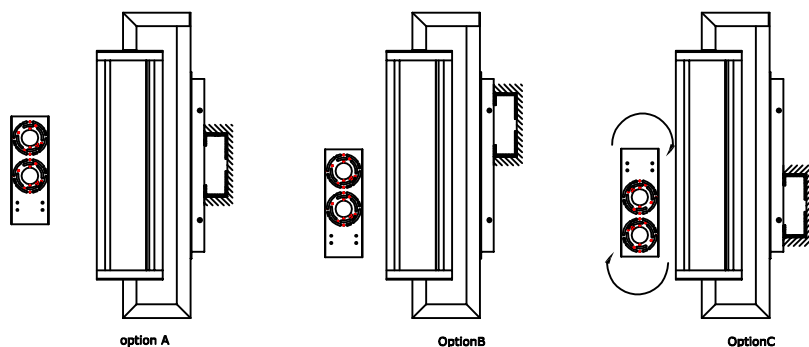

Customer choose the option A
 or option B or option C for their
 requirements

INSTRUCTIONS DE REMPLACEMENT DES LAMPES

- 1) RETIREZ LE COUVERCLE SUPÉRIEUR OU LA CAGE DE L'APPAREIL D'ÉCLAIRAGE EN DÉVISSANT LE FAÎTEAU OU LES VIS
- 2) REMPLACEZ LES AMPOULES
- 3) RÉINSTALLEZ LE COUVERCLE SUPÉRIEUR OU LA CAGE ET SERREZ LES VIS

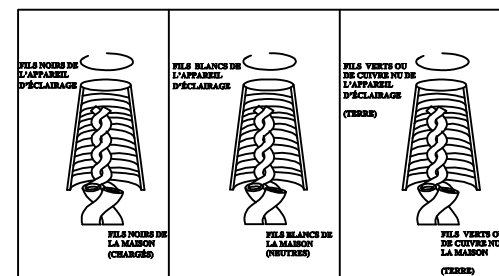

american
 lighting
 association

MONTAGE MURAL