

MINI PENDANT INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

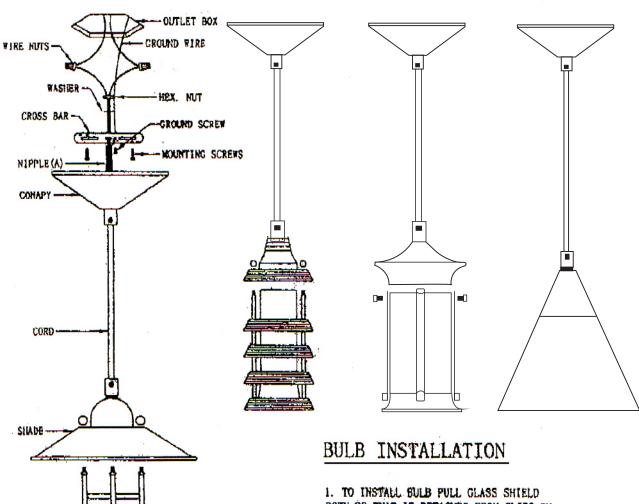

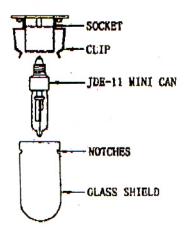

VIRE GUARD

- 1. TO INSTALL BULB PULL GLASS SHIELD DOWN SO THAT IT BETACHES FROM CLIPS ON THE SOCKET.
- 2. SCREW BULB INTO SOCKET.
- 3. PLACE GLASS SHIELD BACK INTO IT'S ORIGINAL POSITION ENSURING CLIPS SEAT IN NOTCHES.

BULB REPLACEMENT

- 1. BEFORE REPLACING THE BULB, BE SURE THAT SHADE CLASS SHIELD AND BULB ARE COOL.
- 2. PULL GLASS SHIPLD DOWN SO THAT IT DETACHES FOR CLIPS ON THE SOCKET.
- 3. UNSCREW EXISTING BULS AND REPLACE WITH NEW BULB.
- 4. PLACE GLASS SHIELD BACK INTO IT'S ORIGINAL POSITION ENSURING CLIPS SEAT IN NOTCHES.