ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING:

TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF

POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirement.

FOR PENDANT

- 1. Attach the cross bar to the outlet box by using 2 mounting screws.
- 2. Thread the fixture wire through the set nipple (A) and the canopy, and then secure the canopy with the set nipple (A).
- 3. Make wire connections with wire nuts:
 - --Attach ground wire to house ground wire using a wire nut or attach them to the cross bar with a green ground screw.
 - --Attach ribbed wire from light to white wire from power source with a wire nut.
 - --Attach smooth wire from light to black wire from power source with a wire nut.

Observing the color code: black with black, white with white, green with green.


- 4. Raise the canopy to ceiling, secure it by screwing the collar loop.
- 5. Fix nipple (B) on loop by screwing.
- 6. Let A & B pass through nipple (B), use the nut, washer to make A.B fixation tight.
- 7. Screw C to the nipple (B) and make C.A fixation tight.
- 8. Fix I on D by screwing.
- 9. Slide E.F.G onto I. Use the nut, washer to make E.F.G fixation tight.
- 10.Let H pass through I, lock J on I and make H fixation tight.
- 11. Hang the crystal beads on arm heads.
- 12.Install bulbs taking care of the prescribed watt value.
- 13. Turn on the power at fuse or circuit box.


FOR SUMI FLUSH MOUNT

- 1. Insert downward 2 screws to the cross bar.
- 2. Attach the cross bar to the outlet box by using 2 mounting screws.
- 3. Thread the fixture wire through the set nipple and the canopy, and then secure the canopy with the set nipple.
- 4. Make wire connections with wire nuts:
 - --Attach ground wire to house ground wire using a wire nut or attach them to the cross bar with a green ground screw.
 - --Attach ribbed wire from light to white wire from power source with a wire nut.
 - --Attach smooth wire from light to black wire from power source with a wire nut.

Observing the color code: black with black, white with white, green with green.

- 5. Let the screw pass through canopy and fix canopy tight by nut.
- 6. Repeat the steps 6~13 as for pendant.

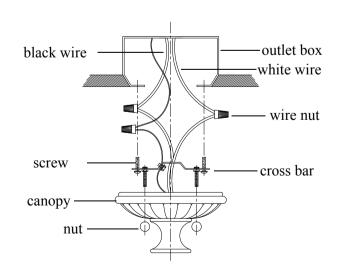

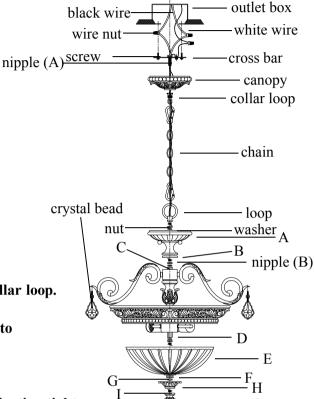

2957-17-44

2957-21-44