
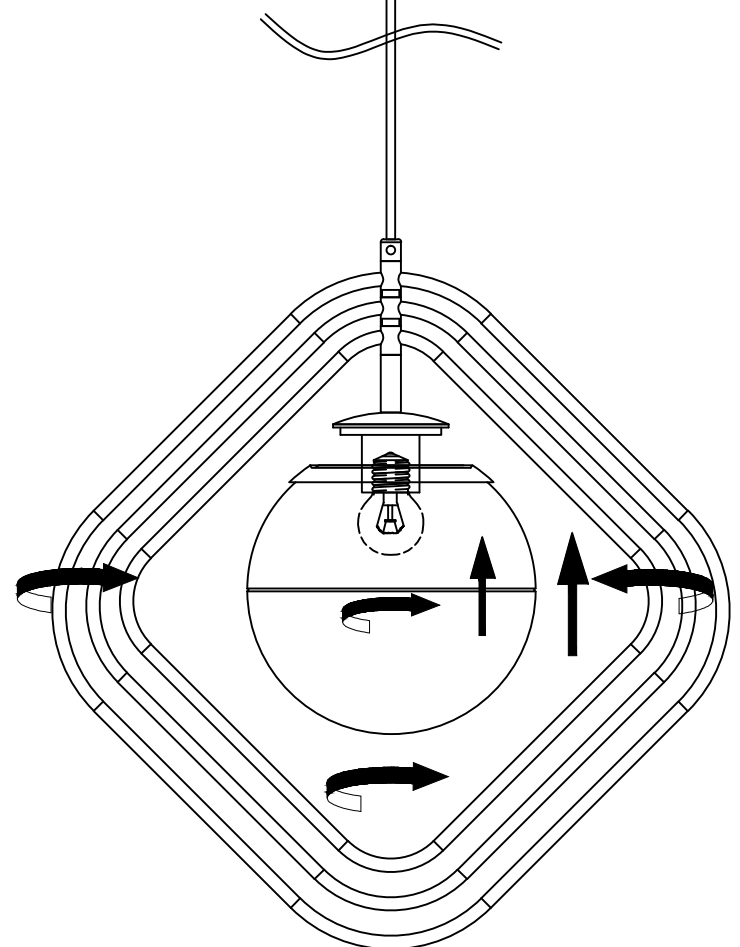
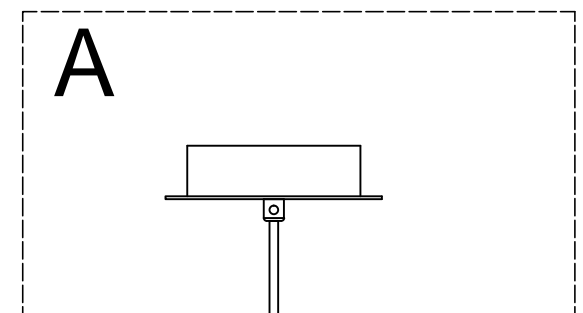
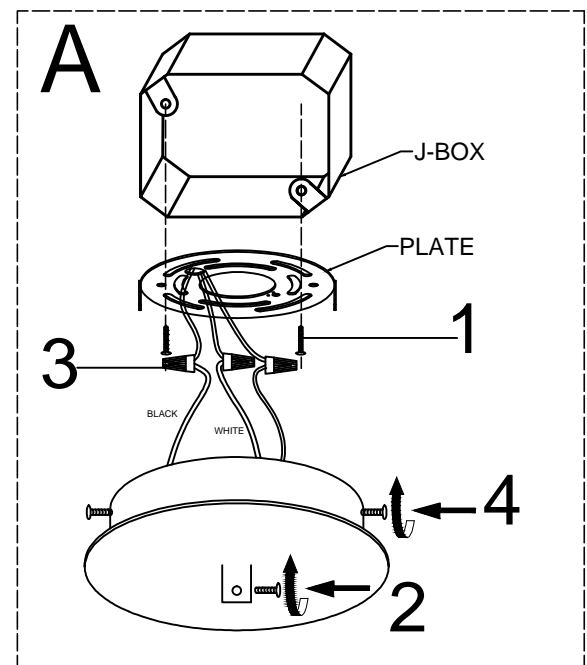


INSTALLATION INSTRUCTION

6802

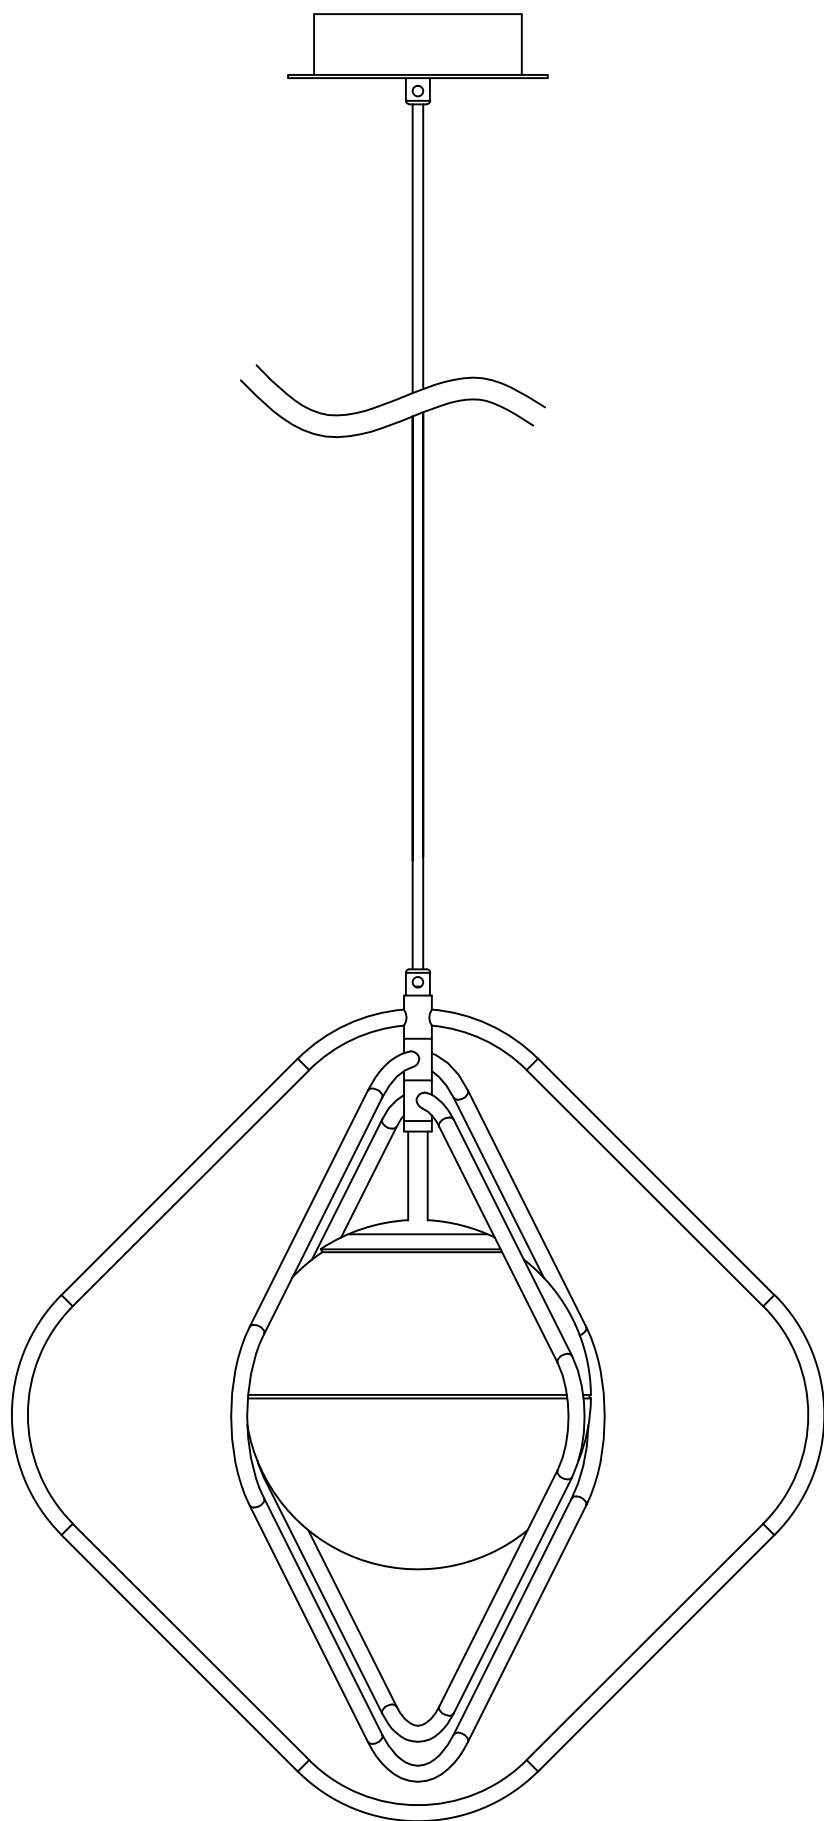

WARNING:

1. MOUNT BULB INTO SOCKET;
2. MOUNT GLASS TO HARDWARE FRAME;
3. ADJUST HARDWARE FRAME'S ANGLE;
4. MOUNT CEILING BASE TO CEILING;