


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirement.

Installation Steps:

1. Carefully unpack your new fixture and lay out all the parts on clear area. Take care not to lose any small parts necessary for installation.
2. Assemble the threaded nipple (A) onto the cross bar and lock it in place by hex nut and attach the universal joint onto the threaded nipple (A).
3. Determine the quantity/length of pipe/pipes needed.
4. Feed the wires through the first pipe and thread the pipe on threaded connector. Use threaded nipple (B) onto the suspended pipes and connect them together.
5. Feed the wires through collar ring, canopy, universal joint and threaded nipple (A) on cross bar. Thread universal joint onto the last pipe tightly.
6. Take this lamp body assembly and attach the cross bar to outlet box by using two mounting screws upwards.
7. Make wire connections:
 - Attach ground wire to house ground wire using a wire nut or attach them to the cross bar with a green ground screw.
 - Attach white or ribbed wire(neutral) from light to white wire from power source with a wire nut.
 - Attach black or smooth wire(hot) from light to black wire from power source with a wire nut.Observing: ground wire with ground wire, neutral wire with neutral wire, hot wire with hot wire.
***Make sure all wire connectors are secured and do not easily pull off with the slight tug.
8. Tuck the wire connections neatly into the outlet box.
9. Attach the canopy to the ceiling then thread the collar ring on universal joint to secure the canopy.
10. Install bulbs.(not included) (Please do not exceed the maximum capacity which is recommended on the fixture.)
11. Insert the glass shade to lamp body and use knob nuts to secure glass as well as plastic washer onto lamp body.
12. Turn on the power at the fuse or circuit box.

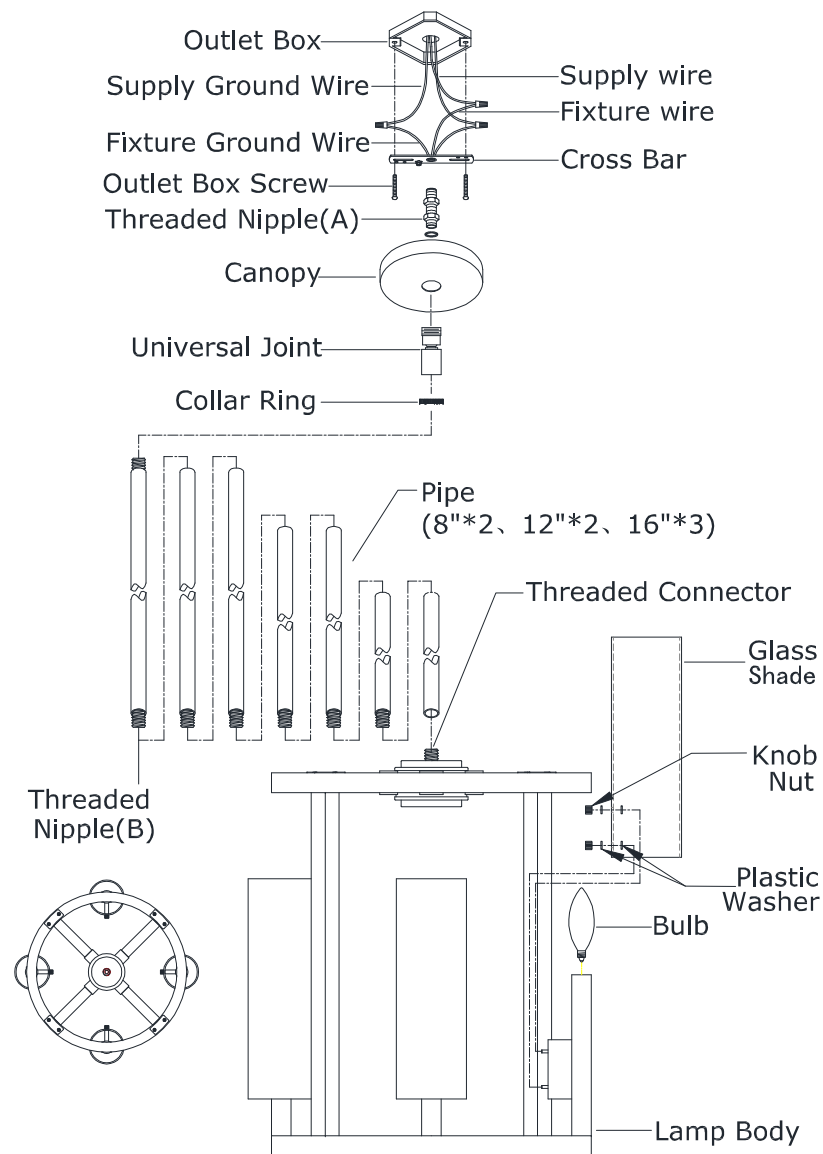

8277-4-xx